# **UNIVERSAL POWER CELLS**



# **GIVES YOU VALUABLE INFORMATION ABOUT MACHINE AND PROCESS PERFORMANCE BY MONITORING MOTOR LOAD**

- Mixture Viscosity
- Tool Condition
- Optimum Feed Rate
- Pump or Fan Flow
- Beginning or End Process
- Obstructions
- Overloads
- Loss of Load

# THE UNIVERSAL POWER CELL SENSES TRUE MOTOR POWER— **THREE PHASE, VARIABLE** FREQUENCY, SINGLE PHASE OR DC

# **MODEL UPC FULLY SELF CONTAINED**

- Easy to install
- No Current Transformers
- No Voltage Transformers

#### COMPACT

• Only 1 3/4" x 5 3/8" x 8"

## **YOU CAN ADJUST FULL SCALE TO MATCH YOUR MOTOR**

- Coarse and Fine Adjustment Pots
- 5HP to 150HP
- Take extra turns for small motors

### VERSATILE

- Works on both Fixed and Variable **Frequency Power**
- ALSO Single Phase & DC

## **THREE BALANCED HALL EFFECT SENSORS**

#### SAMPLE VOLTAGE DIRECTLY

• Up to 600 Volts

## **BUILT-IN POWER SUPPLY**

• Powers the Analog Signals

#### **BUILT-IN RESPONSE ADJUSTMENT**

• Lets you slow the response of the Power Cell to average the readings

## **TWO ANALOG OUTPUTS**

- 4-20 MA
- 0-10 Volts DC
- Electrically isolated

FREE 30 DAY TRIAL AVAILABLE Model UPC \$650 – Immediate Shipment

# SPECIAL PURPOSE UNIVERSAL POWER CELLS



# UPC-E Ethernet Universal Power Cell EMBEDDED WEB SERVER

• View with your browser

### WITH YOUR BROWSER

- Set full scale horsepower
- Set response time to average the load for a smooth signal
- Choose how often to receive data
- Or, respond to UDP or HTTP request

## **TCP/IP AND UDP PROTOCOL**

# **10 BASE T 10 MEGABIT ETHERNET CONNECTION**

## ALSO 10 VOLT DC ANALOG OUTPUT

- Local display
- Troubleshooting

### **CHANGE SETTING ON THE FLY**

- During a machine or process cycle
- Either UDP or HTTP
- Full scale 4HP to 125HP

# UPC-KWH Energy Measuring Universal Power Cell

- Accumulates Kilowatt Hours, Kilowatt Minutes, Kilowatt Seconds
- Accumulates total power into the mixing process for consistent batches.
- Accumulates power-indicative of throughput.

Field Scaleable - 3 to 100 KW Pulse - Dry contact Analog Output - 0-10 Volts

The UPC-KWH measures true power (KW) and momentarily pulses a relay contact every KWH, KWM, or KWS which is selectable. The pulse can signal a computer, meter or counter for power totalizing. An analog 0-10 Volt output reflects the instantaneous power and can input a meter or computer directly.

# **UPC-FR** Fast Response Universal Power Cell

- 0.050 Second Response Time
- Ideal for Machine Tool Monitoring
- Also used together with "V" Series Load Controls

# UPC-230 230 Volt Power Supply Input

# **TYPICAL INSTALLATION-UPC**

The Universal Power Cell is a Motor Load Sensor that monitors power (HP or KW). It works on both fixed and variable frequency power and has two analog outputs. It also works on single phase, DC, and brushless DC. The Universal Power Cell has Three Balanced Hall Effect Sensors, each with a flux concentrator. Each phase passes through a window. A voltage sample for each phase is also taken. The Hall Effect Semiconductor does a vector multiplication of the current flow and voltage which also calculates the power factor. The output is proportional to power (HP or KW).

## **INPUT CONNECTIONS**

Pass each of the phases through the L1, L2, L3 holes in the Cell. Be certain direction is correct. The Terminal side of the Cell faces the supply. Provide voltage sample for each phase. When a Variable Frequency Drive is being used, locate the Power Cell on the output side of the drive. Take the voltage samples on the output side also.

L1 Volts to Terminal 7 L2 Volts to Terminal 8 L3 Volts to Terminal 9

## **ANALOG OUTPUTS**

The Analog Output is powered by the Power Cell.

4-20 Milliamp
0-10 Volts DC
Analog Common

Terminal 1 Terminal 3 Terminal 2

## **120 VOLT SUPPLY**

Terminals 5 and 6

## GROUND

Terminal 4


## **TO ADJUST FULL SCALE**


The Full Scale can be adjusted to match your motor with the Coarse and Fine Pots located under the Access Cover. Put your Ohm meter on the test points.

## **Convenient Scaling**

5K Ohm = 5HP (This is the minimum setting) 10K Ohm = 10HP Etc. 150K Ohm = 150HP (This is the maximum setting) (KW=HP x .746)

# WHY MONITOR POWER INSTEAD OF JUST AMPS?



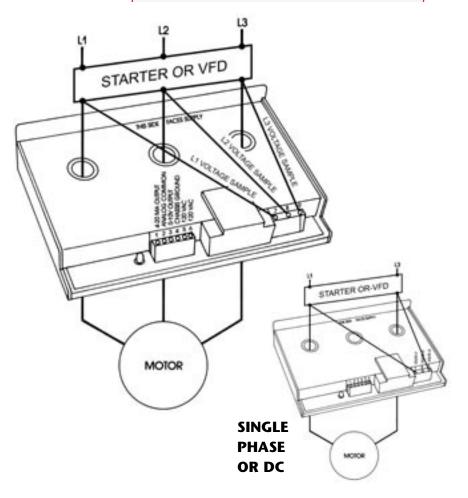

## FOR SMALL MOTORS

Reduce the capacity by taking additional "Turns" through each hole for each phase (Mount the Power Cell on Standoffs). Example: 5HP Full Scale is reduced to 1HP with 5 Turns.

## **RESPONSE ADJUSTMENT**

In some cases, the average power signal may be more useful than instantaneous power. The Response Adjustment slows the response of the Universal Power Cell. Pot is located under Access Cover. Clockwise is fastest.

# **SPECIFICATIONS**

MODEL	UPC	UPC-E	UPC-KWH	UPC-FR	UPC-230
ACCURACY	.5% Full Scale	*	*	*	*
FULL SCALE CAPACITY	5HP** to 150HP	4HP** to 125HP	3 KW** to 100 KW	*	*
OUTPUTS	<ul> <li>4-20 Milliamp, 500 Ohm Max Connected Impedance</li> <li>0-10 Volts DC 2000 Ohm Minimum Load</li> </ul>	<ul> <li>Ethernet 10 Base T</li> <li>10 Megabit</li> <li>0-10 Volts DC</li> </ul>	<ul> <li>Relay: 30 Volts, 5 Milliamp max, 50 MS duration pulse</li> <li>0-10 Volts DC</li> </ul>	*	*
RESPONSE ADJUSTABLE	• .5 Sec. to 12 Sec.	.050 Sec. to 16 Sec.	KWH, KWM, KWS	.050 Sec to 1.2 Sec.	*
FREQUENCY	3HZ to 1KHZ	*	*	*	*
POWER CONSUMPTION	6 VA @ 120 Volts	*	*	*	3 VA @ 230 Volts


\*Specifications same as UPC unless noted

\*\*For smaller motors take extra "turns"

Full Load

No Load

## **DIMENSIONS**

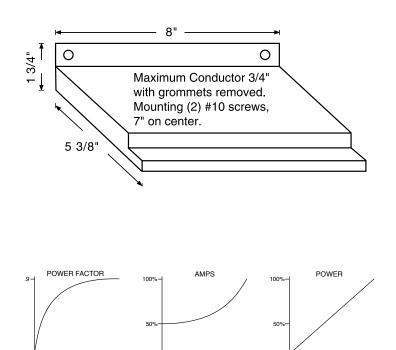

No Load

Full Load

## The Power Cell Uses Balanced Hall Effect Sensors

- Sensitive at low and high frequencies
- Fast Response
- Linear output
- Senses distorted waveforms
- Noise immune
- Accuracy is improved by eliminating the large phase shift errors from the CTs and PCs at low power factors

Balanced Hall Effect sensors are used to measure power with odd shapes and frequencies (like on a Variable Frequency Drive). A Hall Effect sensor has these two characteristics:

- It senses a magnetic field which is proportional to the current flowing through the conductor.
- The Hall Effect semiconductor can multiply two signals. Each Hall Effect Sensor is powered by the signal that comes from the voltage sample for that phase. The Hall device multiplies these voltage and current signals.

This is a vector multiplication which also calculates the lag of the current (power factor). The resulting output is then proportional to power (Volts x Amps x Power Factor).



Full Load

No Load